

Safety Information

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION:
THIS PRODUCT IS A CLASS I LASER PRODUCT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

TWO LASER PRODUCTS:
WAVE LENGTH: CD:780NM DVD:650NM
LASER POWER: NO HAZARDOUS RADIATION IS EMITTED WITH SAFETY PROTECTION.

TO REDUCE THE RISK OF FIRE ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE ONLY THE INCLUDED COMPONENTS.

CD NOTES

- PLAYING A DEFECTIVE OR DUSTY CD CAN CAUSE DROPOUTS IN SOUND.
- HOLD CDS AS ILLUSTRATED.
- DO NOT TOUCH THE UNLABELED SIDE.
- DO NOT ATTACH ANY SEAL, LABEL OR DATA PROTECTION SHEET TO EITHER SIDE OF A DISC.
- DO NOT EXPOSE A CD TO DIRECT SUNLIGHT OR EXCESSIVE HEAT.
- WIPE A DIRTY CD FROM THE CENTER OUTWARD WITH A CLEANING CLOTH.
- NEVER USE SOLVENTS SUCH AS BENZINE OR ALCOHOL.
- THIS UNIT CANNOT PLAY 3-INCH (8CM) CDS.
- NEVER INSERT A 3-INCH CD CONTAINED IN THE ADAPTER OR AN IRREGULARLY SHAPED CD.
- THE UNIT MAY NOT BE ABLE TO EJECT IT, RESULTING IN A MALFUNCTION.

 


Contents


Safety Information.....	1
Panel Controls.....	2
Remote Controls.....	3
Getting Started.....	4
General Operation.....	5
Rotary Knob Menu.....	6-7
Radio and Clock.....	8
RDS (Radio Data System).....	9-11
Disc Playback.....	12
Disc Playable.....	13
Audio/Video/Picture File Playback.....	14
Track Playback.....	15-16
DVD Playback.....	17
DVD Setup.....	18-23
Electrical Connections.....	24-25
Installation Guide.....	26
Anti-Theft System.....	27
Troubleshooting.....	28
Specifications.....	29


Panel Controls

Power On/Off : Press PWR to turn on/off the unit.

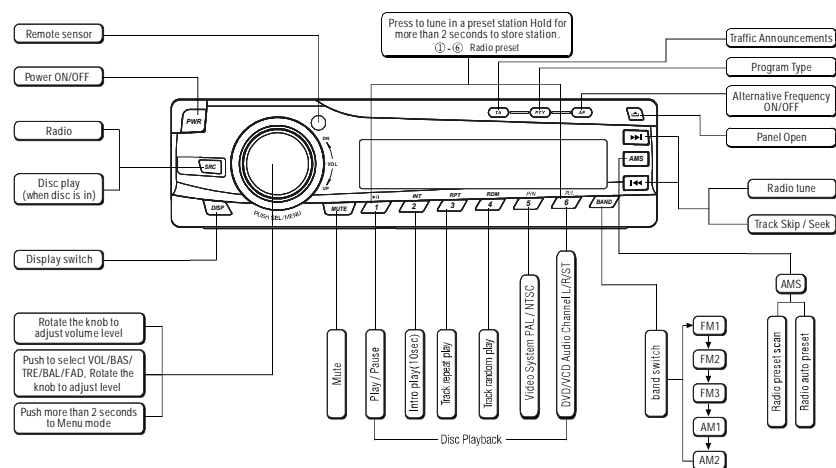

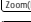


Remote Controls

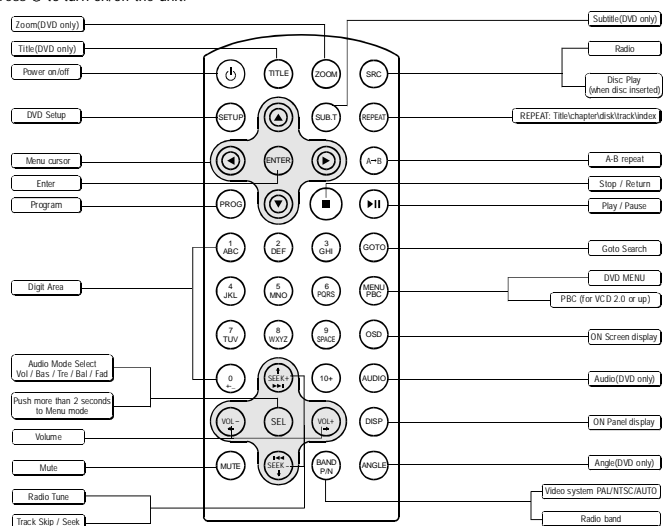 Power On/Off : Press  to turn on/off the unit.



Getting Started

 Press the  button to open the panel and press  to eject the disc.

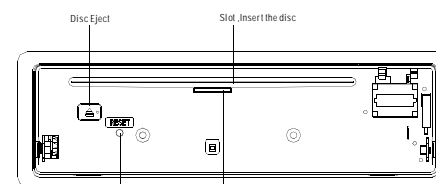


RESET HOLE
Note: Pressing the RESET hole will erase the clock setting and stored stations.

Panel status indication:
When the panel slide down it will light up. When the panel detached from body it will flash.

Remote control operating range

 
The remote control can operate within a distance of 3-5m.




Replacing the lithium battery of remote control unit.

* When the range of the operation of the card remote control becomes short or no functions while operating. Replace the battery with a new lithium battery. Make sure the battery Polarity replacement is correct.

 1. Pull out the battery holder while pressing the stopper.



 2. Insert the button-type battery with the stamped (+) mark facing upward. Insert the battery holder into the remote control.



General Operation

SWITCHING ON AND OFF

1. Press PWR to turn on the unit.
2. Press SRC once or more to select your desired function: DISC, Tuner(Radio).
3. Press PWR to power off.
4. When you switch off the system or car ignition, the settings, tuner presets and the volume level will be retained in the unit's memory.

VOL Knob Function

Push the knob to select VOL/BAS/TRE/BAL/FAD, Rotate the knob to adjust.



- VOLUME control
Display shows the volume level VOL and number from 0 to 63.
- BASS control
Display shows the Bass level.
- TREBLE control
Display shows the TREBLE level.
- BALANCE control
Display shows the BALANCE level.
- FADER control
Display shows the FADER level.

VOL	63
BAS	-7 +7
TRE	-7 +7
BAL	L7 R7
FAD	R7 F7

Rotary Knob Menu



Press the knob more than 2 seconds to enter menu mode, then each press changes the mode as follows:

TA VOL mode → EQ ON / OFF mode → LOUD ON / OFF mode → BEEP ON / OFF → 12/24 Hours mode
 ↓
 VOL LAST/ADJ mode ← RETUNE mode ← TA seek mode

TA VOL mode: Rotate the knob to adjust TA volume.

EQ mode: Rotate the knob to select EQ sound effect.

ROCK → POP → CLASSIC → FLAT → EQ OFF

LOUD mode: Rotate the knob to choose loud on or off.

BEEP ON/OFF mode: Rotate the knob to choose button beep sound on or off.

Rotary Knob Menu

12/24 Hours mode: select 12 hours mode or 24 hours mode.

TA mode: Rotate the control to choose TA ALARM or TA SEEK mode. If the TA (traffic Announcements) is turned on and there is no traffic program identification code received in the specified time, no TA/TP will display and either TA ALARM or TA SEEK will be activated.
 TA ALARM mode : Alarm is turned on. TA SEEK mode: TA SEEK is automatically activated.

TA ALARM

TA SEEK

RETUNE mode: RETUNE-S or RETUNE-L is time length selection of TA SEEK retune interval.
 Rotate the control to choose RETUNE-S or RETUNE-L RETUNE-S: short, TA SEEK Retune interval is 45 seconds.
 or RETUNE-L RETUNE-L: long, TA SEEK Retune interval is 180 seconds.
 REMARK: RETUNE mode functions for TA during TA SEEK mode only.

RETUNE_S

RETUNE_L

VOL LAST / ADJUST MODE

Press knob to choose VOL LAST : the turn-on volume level is the volume level of latest power off.
 Rotate knob to choose VOL ADJ, then rotate the knob to set the turn-on volume level .

VOL LAST

VOL ADJ

Radio and Clock

BAND: 1. Press PWR to power on, then press SRC once or more to select tuner. FM1 → FM2 → FM3 → AM1 → AM2
 Press BAND once or more to select FM1, FM2, FM3, AM1, AM2.
 Display shows wave band, frequency, and preset station number if already stored.

Tune: Radio tune by step manually: Press ◀ or ▶ less than 0.5 seconds.
 Radio seek automatically: Press ◀◀ or ▶▶ more than 0.5 seconds.
 Press either ① - ⑥ button to store the selected station.
 In North and South America the frequency step in the AM and FM band are 10KHz and 200KHz respectively.
 In the rest of the world this step is 9KHz and 50KHz. Usually the frequency step has been factory preset.

AMS : Auto Memory Store
 Press AMS briefly to scan the preset station ① - ⑥ for 5 seconds each. Hold more than 2 seconds, the 6 strongest available station will be automatically saved in the memory of preset button ① - ⑥ .

Clock Display
 Press DISP once or more to display clock time for 5 seconds.

Clock Setting
 1. Press DISP more than 2 seconds, minute display blinks, rotate the knob to set minute.
 3. Press the knob once, hour display blinks, rotate the knob to set hour.
 4. Press DISP again to exit.



RDS (Radio Data System)

RDS service availability varies with areas. Please understand if RDS service is not available in you area, the following service is not available.

RDS Basics

AF (Alternative Frequency) When the radio signal strength is poor, enabling the AF function will allow the unit to automatically search another station with the same PI (program identification) as the current station but with stronger signal strength.

PS (Program Service name) The name of station will be display instead of frequency.

AF Mode: Press AF function less than 2 second to switch AF mode on and off.

AF on: AF function is activated.

AF off: AF function is disabled.

Remark: AF indicator on LCD will flash until RDS information is received. If RDS service is not available in your area, turn off the AF mode.

REG Mode: Press AF for more than 2 second to switch REG mode on and off.

REG on: AF function will implement the regional code (of the PI) and only stations in the current region can be tuned automatically.

REG off: AF function will ignore the regional code (of the PI) and stations in the other regions can also be tuned automatically.

SEEK P4

REG ON

REG OFF

RDS (Radio Data System)

Traffic Announcements

Some RDS FM stations periodically provide traffic information.

TP (Traffic Program Identification)
Broadcasting of traffic information

TA (Traffic Announcements Identification)
Radio announcements on traffic conditions

TA Mode: Press TA to turn on / off the TA function.

When TA mode is turned on, the TA indicator will blink.

When traffic announcement is received, the TA indicator will display.

The unit will temporarily switch to the tuner mode

(regardless of the current mode) and begin broadcasting the announcement at

TA volume level. After the traffic announcement is over, it will

return to the previous mode and volume level. When TA is turned on, SEEK, SCAN, AMS

function can only be received or saved when traffic program identification (TP) code is received.

TRAFFIC

EON (Enhanced Other Networks)

When EON data is received, the EON indicator lights and the TA and AF functions are enhanced.

TA: Traffic information can be received from the current station or stations in other network.

AF: The frequency list of preset RDS stations is updated by EON data. EON enables the radio to make fuller use of RDS information.

It constantly updates the AF list of preset stations, including the one that currently tuned into. If you preset a station around the area at your home, you will later be able to receive the same station at an alternative frequency, or any other station serving the same program, EON also keeps track of locally available TP stations for quick reception.

RDS (Radio Data System)

RDS service availability varies with areas. Please understand if RDS service is not available in you area, the following service is not available.

PTY Reception (Program Type)

RDS FM stations provide a program type identification signal.
Example: news, rock, info, sport, etc.

PTY Mode: press PTY to turn on the Program Type reception, the previous PTY type is shown. Press PTY once again to enter the MUSIC type or press twice to enter the SPEECH type, then use buttons ①—⑥ to select the desired program type. The selected PTY type is shown and searching starts if no other function is selected for 2 seconds. If there is no corresponding program type, NO PTY is shown and the unit will return to normal mode.

NEWS FM

PTY Type Preset

Press PTY once to enter the MUSIC type or press PTY twice to enter the SPEECH type. Then use function ①—⑥ to select the desired program type.

PRESET NO.	MUSIC TYPE	SPEECH TYPE
1	POP M	NEWS
	ROCK M	AFFAIRS
2	EASY M	INFO
	LIGHT M	SPORT
3	CLASSICS	EDUCATE
	OTHER M	DRAMA
4	JAZZ M	CULTURE
	COUNTRY	SCIENCE
5	NATIONAL M	VARIED
	OLDIES M	WEATHER
6	FOLK M	FINANCE
		CHILDREN
		SOCIAL
		RELIGION
		PHONE IN
		TRAVEL
		LEISURE
		DOCUMENT

Disc Playback

Disc Load / Eject



Load : press button to slide down the panel. Insert the disc into the slot.

Eject : press button to slide down the panel. Press to eject the disc.

- When disc inserted, display shows LOAD and then READ.
For MP3 or disc with mixed files, reading time may exceed 1 minute.

- ERROR will be displayed if error found in disc operation.

- For VCD/CD, VCD or CD icon will appear on the display.

- While MP3 files playback, MP3 icon will appear on the display.

- For DVD, DVD icon will appear on the display and TITLE appears. Press ENTER or to play.

LOAD

01:00.22

READ---

ERROR

Disc Playable

DISC supported

CD, HDCD, CD-R/RW, VCD, SVCD, DVD, DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-ROM.

File type supported

Audio file: MP3(*.mp3), WMA(*.wma)

Video file: MP4(optional):DIVX and XVID(*.avi and *.divx)

MPEG 2(*.vob)

MPEG 1(*.dat)

Picture file: JPEG(*.jpg)

MP3 file: ISO 9660 or ISO 9660 + Joliet format - Max. 30 characters

Max. Track number is 448

Max. nested directory is 8 levels

The max. album number is 99

The max. length of each track is 99 minutes 59 seconds

Supported sampling frequency for MP3 disc :8KHz to 48 KHz (44.1KHz preferably)

Supported bit-rates of MP3 disc are: 32 - 320 kbps (128 kbps preferably)

Disc and file NOT supported

*.ACC, *.DLF, *.M3U, *.PLS, MP3 PRO files and files with DRM.

Open session discs

Audio/Video/Picture File Playback

When MUSIC / PICTURE / VIDEO file is played, Category/Folder/File list will be displayed on the screen, and file/folder name being played will be displayed on top. Current selected item will be highlighted.

Category Select

Use ◀/▶ to select

AUDIO

 
PICTURE

VIDEO

Press ENTER to confirm.



On the remote control

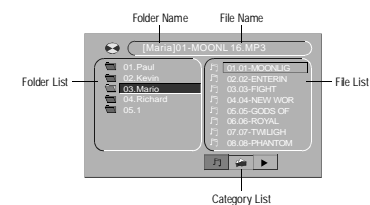

Folder Select

Use ◀/▶ to enter folder list and use ▲/▼ to select desired folder, press ENTER to confirm.

File Select

Use ◀/▶ to enter file list and use ▲/▼ to select desired file, press ENTER to play back, press ■ to return.

For PICTURE, press ▶ to slide show the pictures, press PROG to select picture showing style.

For MUSIC, press ■ will enter intro logo, then press▶ to return.

Track Playback

Select desired track

- Press ◀ or ▶ to skip to next track.
- use 1 - 9 and 0, 10+ buttons on the remote control to select desired track number.

Fast forward / backward during playback

- Press ◀◀ or ▶▶ for more than 2 seconds once or more to select X2, X4, X8, X20 to fast backward or forward track during playback.
- During the fast forward or backward operation, press ▶|| briefly to playback again.
 - During the fast forward or backward operation, the volume will be muted.

INTRO(for CD/VCD only)

You can play the beginning of every track for 10 seconds in sequence.

1. During playback, press INT once.
-INT ON/OFF will appear on the display.
2. Press INT again to select the current track.



On the panel

Random track playback (For CD/VCD/MP3 Only)

You can play all the tracks in random order.

1. During playback, press RDM once or more.
-RDM icon will appear on the display.
2. Press RDM again to select normal playback.



On the panel

REPEAT

During playback, press RPT once or more.

- RPT icon will appear on the display.
- For VCD/CD: Display appears
RPT ONE → RPT ALL → RPT OFF
- For DVD: Display appears
RPT CHAP → RPT TITL → RPT OFF
- For File disc: Display appears
RPT ONE → RPT DIR → RPT ALL → RPT OFF



On the remote control



On the panel

Note: If you do not select RPT on, when the entire disc or TITLE playback has finished, the system will stop. If no other control, after 5 minutes the unit will into standby mode.

REPEAT A→B

Selected desired passage to repeat playback.

- Press A→B once to select starting point. Display shows REPEAT A.
- Press A→B again to select ending point. Display shows REPEAT A→B, and selected passage start to replay.
- Press A→B once again to exit. Display shows A→B CANCELLED.



On the remote control

Track Playback

PAUSE

- During playback, press ▶|| to pause playback.
- The sound will be muted.
- Display "PAUSE" in the TV screen, display and blink "PAUSE" on the panel display.
- Press ▶|| again to continue playback.



On the remote control



On the panel

PBC - Playback Control (For VCD only):

1. If you insert a VCD with PBC, playback starts from the beginning of the 1st track automatically.
2. Press PBC to show menu, use ◀◀ / ▶▶ or digit button to select desired track. Press ■ to return to menu. Press PBC again to exit menu.



On the remote control

GO TO


- Goto desired track/chapter or time point directly. Press GOTO button on the remote control, track or DVD Title/Chapter and time display on top of the screen. Current item is highlighted. Use ◀/▶ to select desired item. Use digit button to select number. Press enter to confirm.





On the remote control

Program

- Press PROG to enter program list. Use ▲/▼ or ◀/▶ cursor and digit button to enter number.
- For DVD and File disc, select title and chapter number.
- For VCD and CD, select track number.
- Press ▶|| to play, or move the cursor to select "PLAY" and press ENTER to play.
- If you want to delete the list, move the cursor to "CLEAR", press ENTER to delete all the list set before.
- Press PROG again to exit program play.

 

On the remote control

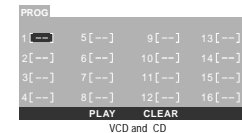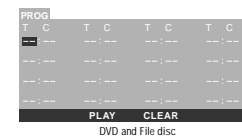  

DVD Playback

 
DVD Audio Select

Press AUDIO or R/L to select audio language to listen if the DVD has multiple audio languages.



VCD Audio Select

Press R/L to select audio channel to listen.




DVD Subtitle Select

Press SUB.T to select the subtitle language to show if the DVD has multiple language subtitles.



DVD TITLE Select

 Press TITLE to display title or chapter list, use ◀/▶ or ▲/▼ cursor or digit number to select, press ENTER to play.



DVD Angle Select

Press ANGLE to select different angle to view if the DVD has multiple-angle views.



ZOOM

Press ZOOM button, the picture will be zoomed accordingly.

 


DVD Setup

Press SETUP to display setup menu on the screen.

Use ◀/▶ to select setup items:


SYSTEM - LANGUAGE - AUDIO - VIDEO - DIGITAL

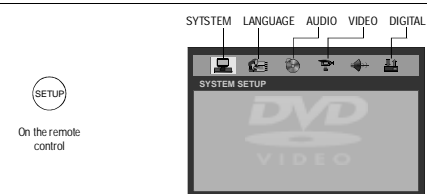

DVD System Setup


Use ◀/▶, ▲/▼ to select and ENTER to confirm.

 TV System

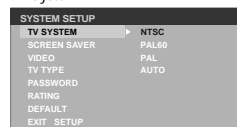


Select the TV system in the setting menu.

 Screen Saver

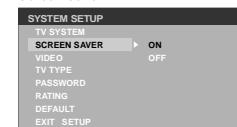

The screen saver appears if disc stop last more than 3 minutes.
Original setting: Open.

 
Video Output Mode

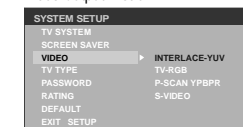

Original setting: INTERLACE-YUV.

DVD System Setup

 Setting TV type

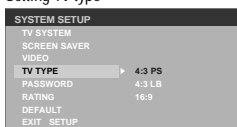

Select TV type to watch wide screen movies.
4:3 Pan Scan: For 4:3 TV, left and right edges will be cut.
4:3 Letter Box: For 4:3 TV, black bars will appear on top and bottom.
16:9: For 16:9 wide screen TV.

Load Default



 
If this item is selected, the unit will return to original setting.

Setting Password



Original password is 0000.

Setting Rating

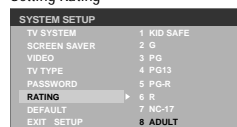

The rating of the disc is from 1 to 8: (1) with the most limits when playing. (8) with the least limits when playing. Original setting: 8
Note:
The rating can be selected only under the password unlocked status, and the limits can be worked only under the password locked status.

DVD Language Setup

OSD Language



Select on screen display language of the DVD .

Menu Language



Select menu language of the DVD from which are contained in the DVD.

Audio Language



Select audio language of the DVD from which are contained in the DVD.

 
Subtitle Language



Select subtitle language of the DVD from which are contained in the DVD.


DVD Audio Setup

Digital Output

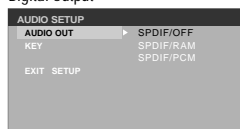

Select digital output format.
SPDIF/OFF: There is no signal output from coaxial or optical output.
SPDIF/PCM: When the unit is connected with the amplifier by coaxial or optical connector, please select this mode.
SPDIF/PCM: When the unit is connected with the two-channel digital stereo amplifier, please select this mode.

 
Setting Volume

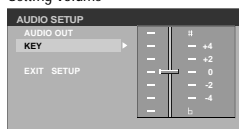

Setup the volume with the ▲ / ▼ buttons.


DVD Video Setup

 Brightness

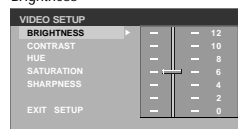


Set the brightness of the video output with ▲ / ▼ .

 Contrast

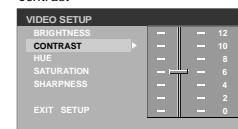


Set the contrast of the video output with ▲ / ▼ .

 Hue

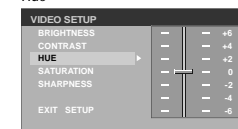


Set the hue of the video output with ▲ / ▼ .

 Saturation

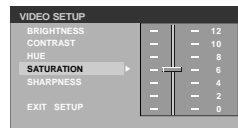

Set the saturation of the video output with ▲ / ▼ .

 
Sharpness

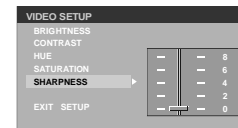

Set the sharpness of the video output with ▲ / ▼ .


DVD Digital Setup

 Output Mode

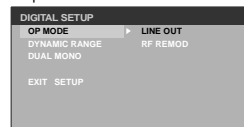


Select the output mode:
LINE OUT: Compress the input signal. The volume is small.
RF REMOD: The volume is large.

 Dynamic Range

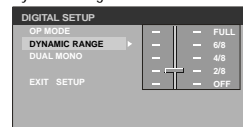

When you select the compressed mode as "line out", select it to adjust the compression proportion and get the different compressed effect.
 When select **FULL**, the audio signal is minimum; when select **OFF**, the audio signal is maximum.

 
DUAL MONO

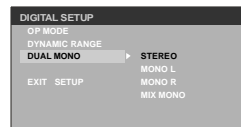

Select the audio channel from **STEREO**, **MONO L**, **MONO R** and **MIX MONO**.

Electrical Connections

 Wiring Diagram

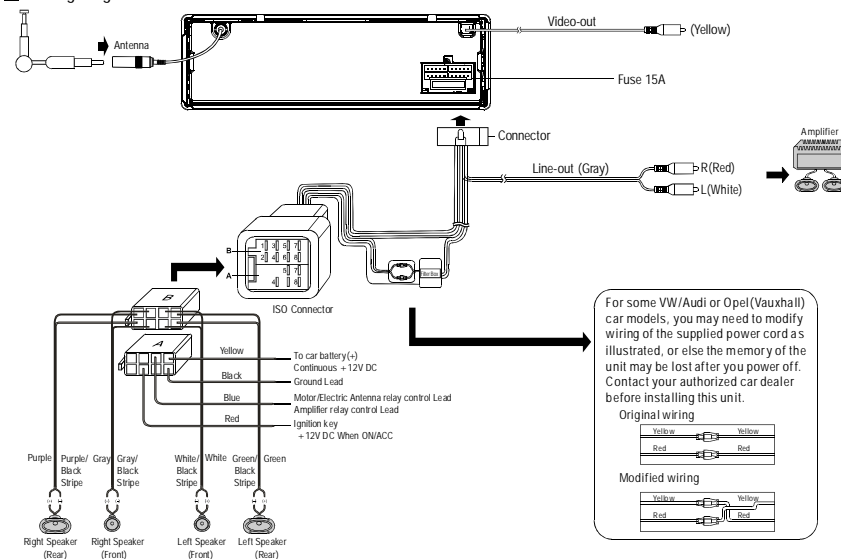

Electrical Connections

Using the ISO Connector

1. If your car is equipped with the ISO connector, then connect the ISO connectors as illustrated.



2. For connections without the ISO connectors, check the wiring in the vehicle carefully before connecting. Incorrect connection may cause serious damage to this unit. Cut the connector, connect the colored leads of the power cord to the car battery, as shown in the colour code table below for speaker and power cable connections




LOCATION	FUNCTION	
	Connector A	Connector B
1		Rear Right (+) - Purple
2		Rear Right (-) - Purple / Black Stripe
3		Front Right (+) - Gray
4	ACC+/red	Front Right (-) - Gray / Black Stripe
5	Auto Antenna/blue	Front Left (+) - White
6		Front Left (-) - White / Black Stripe
7	Battery 12V(+)/yellow	Rear Left (+) - Green
8	Ground/black	Rear Left (-) - Green / Black Stripe

 
Installation Guide

Installation Procedures

First complete the electrical connections, and then check for correctness.

Reset

Press  button to flip down the panel. Then press the Reset button with a pointed object to reset the unit to the original status.



Reset

Note: Press the RESET button will erase the clock setting and stored stations.

 
Important: Remove these two screws before installation. Otherwise, the DVD Player will not work.

Installation Opening




This unit can be installed in any dashboard having an opening as shown above. The dashboard should be 4.75 mm - 5.56 mm thick in order to be able to support the unit.

1 Insert mounting collar into the dashboard, and bend the mounting tabs out with a screwdriver. Make sure that lock lever (※) is flush with the mounting collar (not projecting outward).

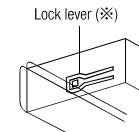

Lock lever (※)

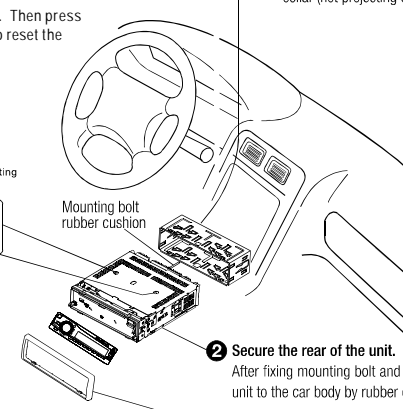 


2 Secure the rear of the unit. After fixing mounting bolt and power connector, fix the rear of the unit to the car body by rubber cushion.

3 Insert trim plate.

Anti-Theft System

This unit is equipped with a flip-down detachable panel.
Panel can be detached and taken with you, helping to deter theft.

Removing the panel

 
 
 
 
 
1. Press PWR button to switch off the power of the unit.
2. Press  button to flip down the panel.
3. Hold the middle of the panel. Take off one end, and then take off the other end.
4. Place the panel into the case and take it with you when you leave the car.

Install the panel

1. Hold the panel and ensure the panel faces toward you, and set the right side of the panel in the panel bracket.
2. Press the right side of the panel until it locks.

Remove the unit

1. Remove the panel and the trim plate.
2. Insert both T-Keys into hole on the front of the set until they lock.
3. Pull out the unit.



Trouble shooting

If you suspect something is wrong immediately switch power off. Do not use the unit in abnormal condition, for example without sound, or with smoke or foul smell, can cause fire or electric shock. Immediately stop using it and call the store where you purchased it. Never try to repair the unit yourself because it is dangerous to do so.

■ General

No power or
no sound

Car's engine switch is not on.
Turn your car's key to ACC or ON.
Cable is not correctly connected.
Check connection.
Fuse is burnt. Replace fuse.
Check volume or mute on / off.
If the above solutions cannot help,
Press the RESET button.

■ Disc

Disc is inside but
no sound.

Disc is upside down.
Place disc in the correct direction,
and the label side up.
Disc is dirty or damaged.
Clean disc or change another disc.

Disc sound skips,
tone quality is low.

Disc is dirty or damaged.
Clean CD or change another CD.

Sound skips due
to vibration.

Mounting angle is over 30°.
Adjust mounting angle to less than 30°.

Unstable mounting.
Mount the unit securely with the
mounting parts.

■ Radio

Noise in
broadcasts


Station is too far, or signals are too weak.
Select other stations of higher signal level.

Preset station
lost

Battery cable is not correctly connected.
Connect the battery cable to the
terminal that is always live.

■ Error Display Messages

ERR

Disc is dirty, damaged or upside down.
Press  to eject the disc.

When video file
initializing time
is too long

File read error or file type not supported.
Press SRC to exit. Then press SRC
to play disc again.

Specifications

■ General

Power supply:	12V DC(11V-16V) Test voltage 14.4V, negative ground
Maximum power output:	50Wx4 channels
Continuous power output:	25Wx4 channels (4 Ω 10% T.H.D.)
Suitable speaker impedance:	4-8 ohm
Pre-Amp output voltage:	2.0V(CD play mode: 1KHz, 0 dB, 10 K Ω load)
Fuse:	15A
Dimensions(WxHxD)	178x50x166mm
Weight:	1.7kg

■ FM Stereo Radio

Frequency range:	87.5-108.0 MHz (Europe) 87.5-107.9 MHz (America)
Usable sensitivity:	8 dB μ
Frequency response:	30 Hz-15KHz
Stereo separation:	30dB(1KHz)
Image response ratio:	50dB
IF response ratio:	70dB
Signal/noise ratio	>55dB

Note: Specifications and the design are subject to change without notice due to improvements in technology.

■ AM(MW) Radio

Frequency range:	522-1620 KHz (Europe) 530-1710 KHz (America)
Usable sensitivity(S/N=20dB):	30 dB μ

■ Disc Player

System:	Disc digital audio system
Frequency response:	20 Hz - 20 KHz
Signal/noise ratio:	> 80 dB
Total harmonic distortion:	Less than 0.20%(1 KHz)
Channel separation:	>60 dB
Video signal format system:	PAL/NTSC
Video:	
video output:	1 \pm 0.2V
horizontal nesowtiou:	\geq 500 lines

■ Components

Mounting collar	1
Machine screws M5x6 mm	4
M4x6 mm	4
Mounting bolt (50 mm)	1
Wire connector	1
Removable face plate case	1
Trim plate	1
T-key	2
Operating Instructions	1
Rubber cushion	1
Remote control	1